

# Backpack by **POSPIPE**


## Overview

The **Backpack** is a true IP device and not a dial emulator. A dial emulator needs the terminal to go through the lengthy analog dial steps of dialing, transmitting and receiving and only eliminates the dial connection time process. Faster but nowhere near as fast as a true IP device. The **Backpack** attaches to a CM3000 to form a check verification combo that provides ease of use and small footprint.

## Connections

1) Unplug the power and phone cords from the CM3000.

2) With the CM3000 facing you, set the two tabs of the **Backpack** into the slots on the top rear of the CM3000.

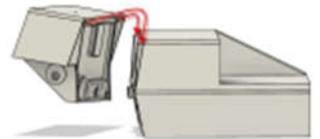

3) Pull the **Backpack** bottom towards the CM3000; this inserts the two connectors of the **Backpack** into the CM3000.



4) Plug the Ethernet cable into the RJ45 jack on the back of the **Backpack** and the CM3000 power cord into the port on the indented side of the **Backpack**. If desired, plug a phone cord into the CM3000 phone jack located below the power port.

